

Pipe threading machine manual

I、 Scope of use

Used for all kinds of water pipe, wire pipe, gas pipe sleeve wire, size bearing 1/2 '~2', widely used in equipment installation and construction industry.

II、 This machine is a power tool. Please read the following instructions carefully

1. Ambient temperature: $-15^{\circ}\text{C}\sim 40^{\circ}\text{C}$
2. Relative humidity shall not exceed 90% (25°C)
3. Voltage 110V \pm 10% (110V specification) 220V \pm 10% (220V specification)
4. Transportation environment temperature: $-23^{\circ}\text{C}\sim 55^{\circ}\text{C}$
5. The machine shall be stored in a dry room, away from dangerous gas invasion, and shall not be stored with acid or alkali.

III、 Safe use

1. Do not touch the machine without the operator during operation to prevent accidental injury.
- 2, pay attention to the use of appropriate socket and voltage.
- 3, do not put the tool in the rain or other wet places, to prevent the tool leakage.
4. The operator shall wear safety clothing, gloves and goggles.
5. Make sure the tool is powered off when installing it

IV、 parameters

1. Product model: ZIT-KY01-50 Specification: 1/2 '~2'
2. Use voltage: 110V and 220V. Please choose carefully when purchasing.
- 3, accessories: die 1/2 ', 3/4 ', 1 ', 1-1/4 ', 1-1/2 ', 2 ', carbon brush, fixture, oil can.
4. Switch: heavy load switch, safety lock and positive and negative switch.
5. Reduction box: Aluminum alloy casting is strong and durable.
6. Body: plastic shell and weight-resistant handle
7. Weight: 6.2kg