 


XTREMEPOWER **US**

WALL CHASER 3000W

ITEM # 61066

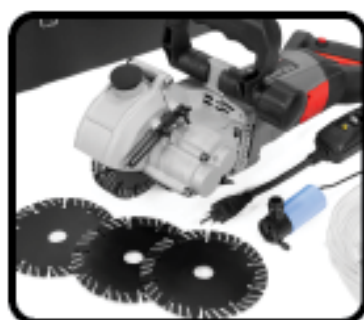

OWNER'S MANUAL AND SAFETY INSTRUCTIONS

SAVE THIS MANUAL. KEEP THIS MANUAL FOR SAFETY WARNINGS, PRECAUTIONS, ASSEMBLY, OPERATION, INSPECTION, MAINTENANCE AND CLEANING PROCEDURES. WRITE THE PRODUCT'S SERIAL NUMBER ON THE BACK OF THE MANUAL, OR THE MONTH AND YEAR OF PURCHASE IF PRODUCT HAS NO SERIAL NUMBER

FOR QUESTIONS, PLEASE CALL CUSTOMER SERVICE: 909.628.0880



GENERAL SAFETY WARNINGS

Read all safety warnings and instructions. Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury. Save all warnings and instructions for future reference.

- Keep area well lit. Cluttered or dark areas invite accidents.
- **DO NOT** operate power tools in an explosive atmosphere, such as in the presence of flammable liquids, gases or dust. Power tools create sparks which may ignite dust or fumes.
- This appliance is not intended for use by persons, including children with reduced sensory or mental capabilities or lack of experience or knowledge.
- Keep children and bystanders away while operating the power tool. Distractions can cause the user to lose control.

ELECTRICAL SAFETY

- Power tool plugs must match the power outlet. Never modify the plug on this power tool in any way.
- **DO NOT** use any adapter plugs with earthed (grounded) power tools. Unmodified plugs and matching outlets will reduce the risk of electric shock.
- Always use an approved extension lead suitable for the power input for this tool. Before use, inspect the extension lead for signs of damage, wear or aging. Replace the extension lead if damaged or defective.
- Power tool plugs must match the outlet. Never modify the plug in any way. **DO NOT** use any adapter plugs with grounded power tools. Unmodified plugs and matching outlets will reduce risk of electric shock.
- Avoid body contact with grounded surfaces such as pipes, radiators, ranges and refrigerators. There is an increased risk of electric shock if your body is grounded.
- **DO NOT** expose power tools to rain or wet conditions. Water entering a power tool will increase the risk of electric shock.
- **DO NOT** abuse the cord. Never use the cord for carrying, pulling or unplugging the power tool. Keep cord away from heat, oil, sharp edges or moving parts. Damaged or entangled cords increase the risk of electric shock.
- When operating a power tool outdoors, use an extension cord suitable for outdoor use. Use of a cord suitable for outdoor use reduces the risk of electric shock.
- If operating a power tool in a damp location is unavoidable, use a Ground Fault circuit interrupter (GFCI) protected supply. Use of a GFCI reduces the risk of electric shock.
- Stay alert, watch what you are doing and use common sense when operating a power tool. **DO NOT** use a power tool while you are tired or under the influence of drugs, alcohol or medication. A moment of inattention while operating power tools may result in serious personal injury.
- Use personal protective equipment. Always wear eye protection. Safety equipment such as dust mask, non-skid safety shoes, hard hat, or hearing protection used for appropriate conditions will reduce personal injuries.
- **DO NOT** force the power tool. Use the correct power tool for the application.
- **DO NOT** use the power tool if the power switch does not turn on or off.
- Disconnect the plug from the power source and/or the battery pack from the power tool before making any adjustments, changing accessories or storing power tools.

SAFETY INFORMATION

- Store idle power tools out of the reach of children and do not allow persons unfamiliar with the power tool or these instructions to operate the tool.
- Power tools are dangerous in the hands of untrained users. Maintain power tools. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the power tool's operation. If damaged, have the power tool repaired before use.
- During the slotting operation, keep the machine straight and advance uniformly.
- Wear insulated gloves and shoes, when using the water cutting operation to avoid electric shock.
- Draw the guide wire on the work surface to improve efficiency and accuracy of slotting.
- This machine is high-powered with a heavier work load, ensure that the onter-connecting components are solid and reliable before using the Wall Climber.
- Waterless cutting operations should be equipped with dust removal equipment.
- When turning the machine, you should open the cover while paying special attention to the protection of flying sand. Slotting work without protection is very dangerous. In serious cases, it will cause personal injury.
- When using a pump to groove on the wall, work from top to bottom. Be careful not to let water flow into the machine.


SAVE THESE WARNINGS.

Item number	61066
Voltage/Frequency	220v AC/50-60HZ
Rated Power	3000W
Maximum Load Power	4300W
Revolution Speed	5000RPM
Saw Blade Specification	5.2x0.78x0.17in
Max Cutting Capacity	1.65"(W)x1.61"(D)

OPERATION

NAME OF COMPONENTS


- | | | |
|------------------|-------------------|-------------------|
| 1. Switch | 5. Front Handle | 9. Bearing |
| 2. Handle Cover | 6. Head Shell | 10. Bearing Plate |
| 3. Rotary Button | 7. Movable Shield | 11. Funnel |
| 4. Chassis | 8. Saw Blade | 12. Brush Cover |

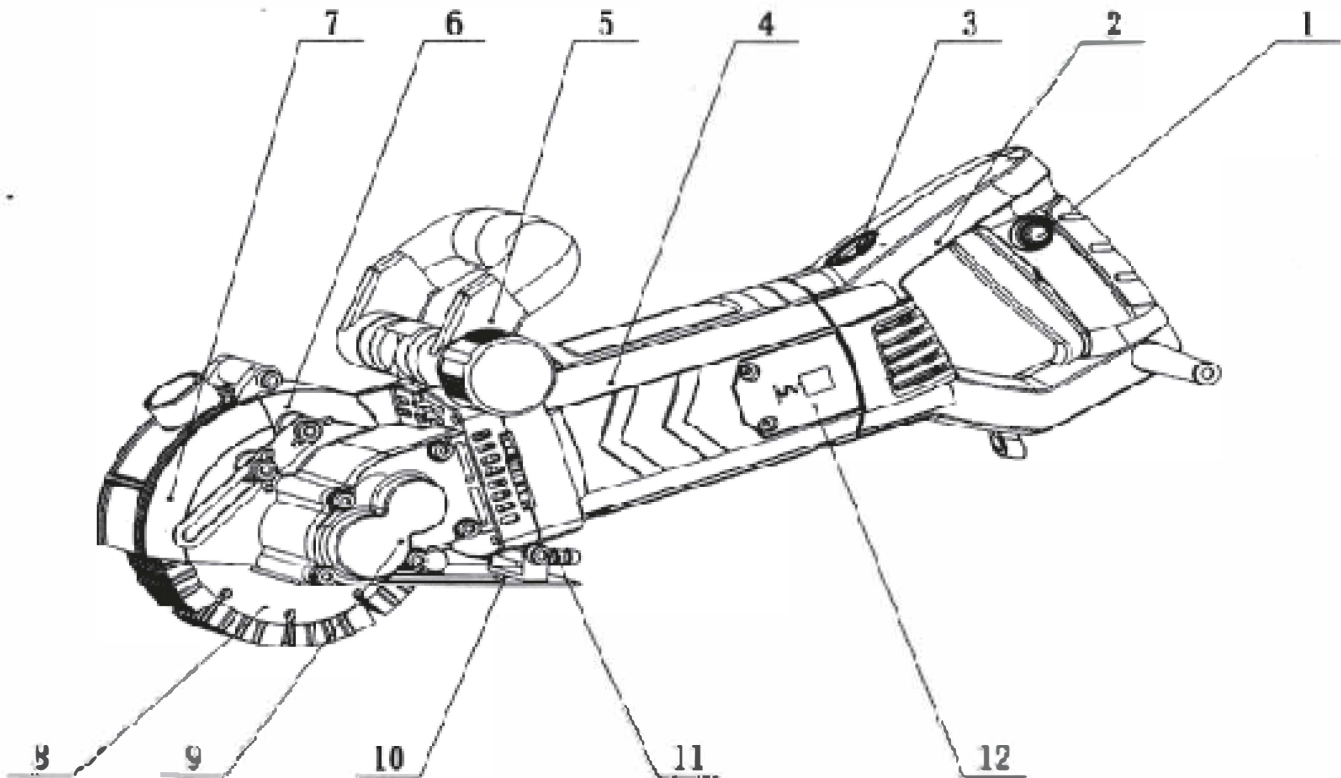 

WORKING ENVIRONMENT

1. the work area should be clean, well lit and have good ventilation.
2. Do not use this machine in places with flammable and/or explosive materials.
3. Keep Children and bystanders away from the machine when operating.
4. Do not pull the machine by the cord.
5. The machine uses a leakage protection plug. Use the plug as the warning label requires.
6. The socket power supply should match with the plug provided. Do not make changes to the plug of this machine.
7. Do not operate the machine in wet weather.
8. When the machine is used outdoors, use the power cord extending 4mm above and keep the connection reliable.
9. When turning on the machine, avoid any part of the body touching the wall surface.

 PARTS INFORMATION

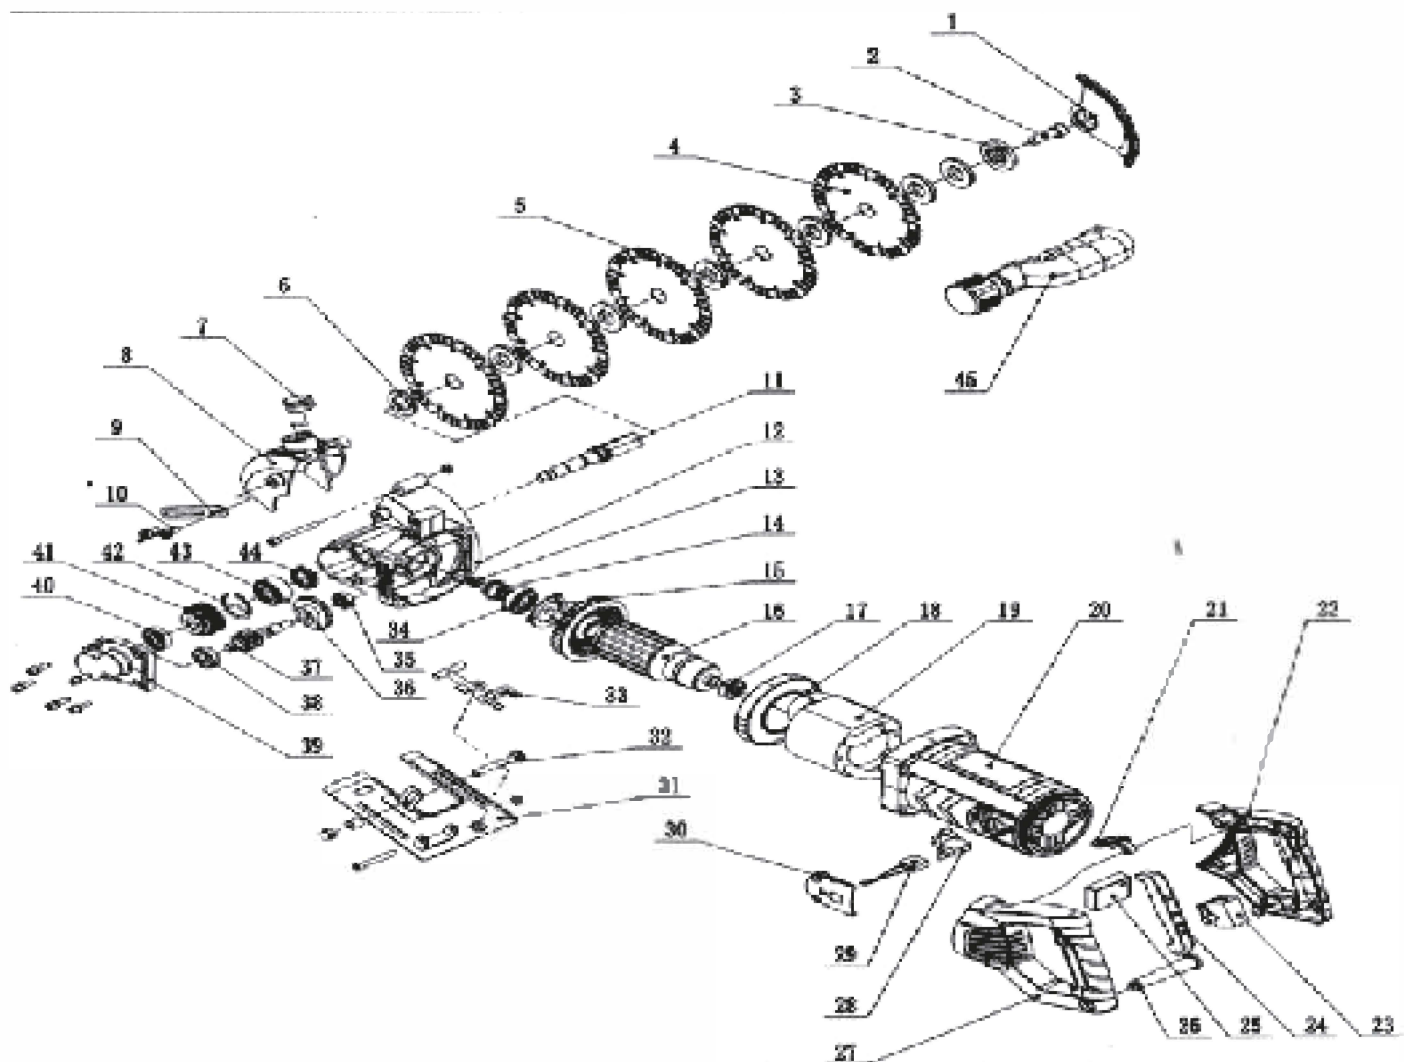


#	DESCRIPTION	QTY	#	DESCRIPTION	QTY
1	Side Cover	1	24	Switch button	1
2	Internal 6 angle screws M10x25	1	25	Soft start	1
3	Upper pressure plate	1	26	Wire sheath	1
4	Saw Blade	5	27	Left handle	1
5	Shim	7	28	Carbon brush frame	2
6	Lower pressure plate	1	29	Carbon brush	2
7	Rubber plug	1	30	Brush holder cover	2
8	Protection plug	1	31	Floor	1
9	Fast limit	1	32	Carriage Screw	1
10	Butterfly screw	2	33	Water tap	1
11	Output shaft	1	34	Bearing 6202	1
12	Head	1	35	Bearing 608	1
13	Losser nut M8	1	36	Large parachute tooth	1
14	Small beachtooth	1	37	Gear shaft	1
15	202 press plate	1	38	Bearing 6000	1
16	Rotor	1	39	Bearing seat	1
17	Bearing 629	1	40	Bearing 6200	1
18	guide Ring	1	41	Gear	1
19	Stator	1	42	Hole gear ring	1
20	Shell	1	43	Bearing 3202	1
21	Rotary button	1	44	Skeleton oil seal	1
22	Right Handle	1	45	Side handle assembly	1
23	Switch	1			


OPERATION

Figure 1

 Side handle forward

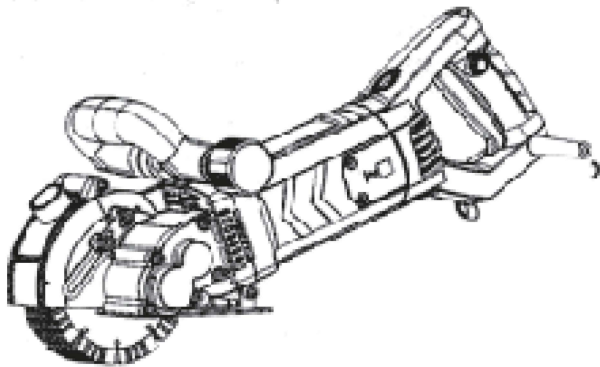

 The state of a cover when the cover is closed.

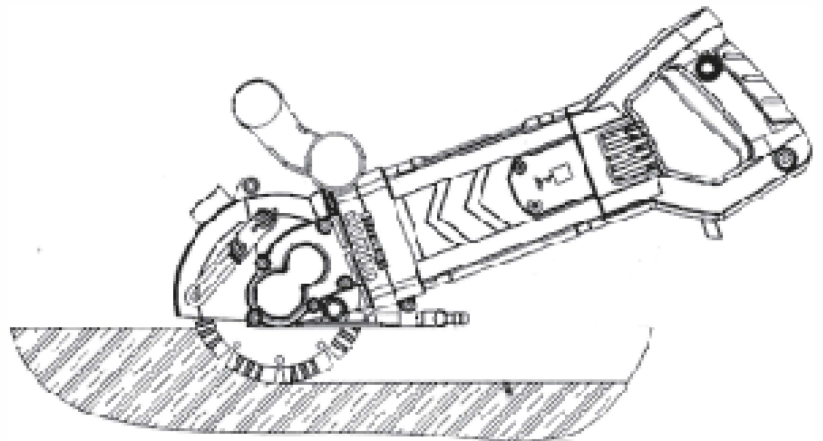


A plane wall for cutting (slotting) when the cover is closed.


B. The corner slotted (Figure 2) operation

Figure 2

 Unscrew the screws
Flipping shield
Side handle backdrop

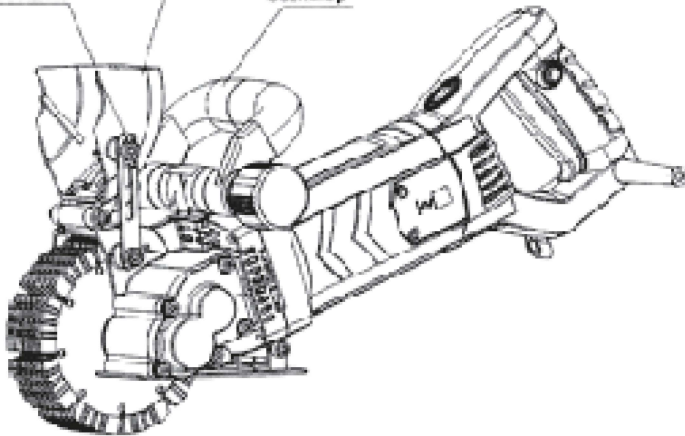

The state of overturn.

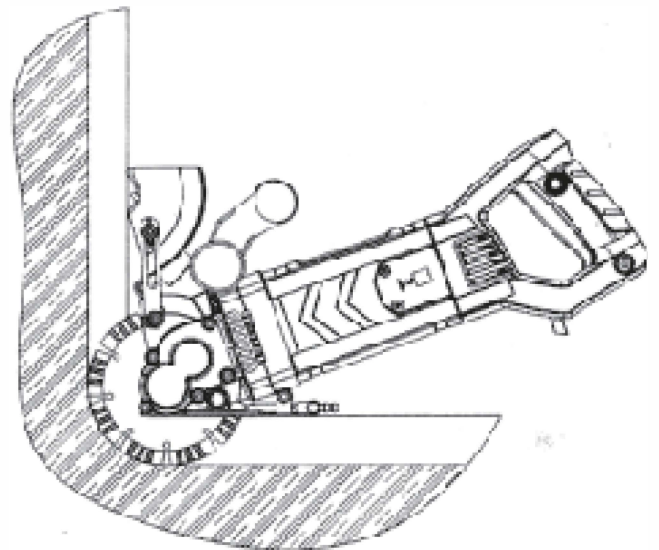 

When the cover is turned over, it is used for cutting (slotting) wall corner.

 
USING WATER PUMPS

1. A pipe into the machine on the top.
2. The other end of the water pipe into the outlet
3. The pump into the bucket with water plug. 220V power can be used.


OPERATION

Replace the cutting piece, as shown for Disassembly and assembly

1. Disassembly tools

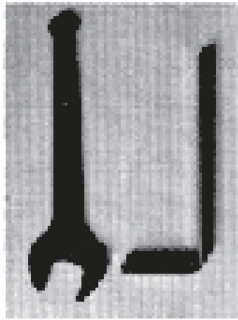

 2. Open the cover sheet

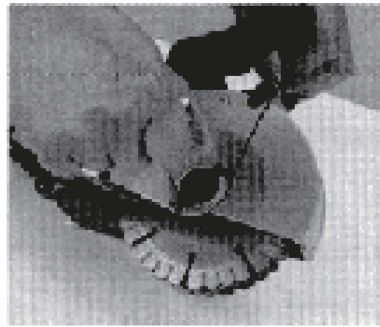


3. Loosen the screw and flip the activity shield



4. Unfold counterclockwise



 
5. Remove the pressure plate and saw blade

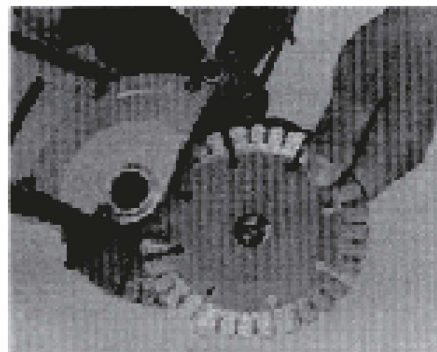

6. Remove the spacer between the saw blades



 7. Remove the order of reverse installation, to complete the replacement. (Lock clockwise)

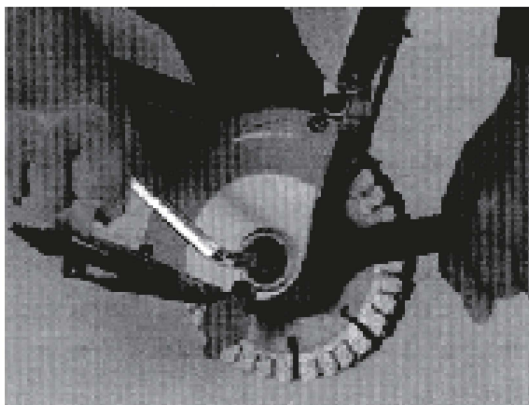

MAINTENANCE AND REPAIR

Before and maintenance is performed on the machine, confirm the power to the machine is off and unplugged from the power outlet.

1. The machine is manufactured according to safety standards and should not be disassembled if the machine fails to work. Contact customer service for help.

2. When repairing the machine, the accessory must be the spare parts provided by the manufacturer.

3. After each use of the machine, be sure to clean the gravel and dust on the machine and keep all operating parts such as switched, plugs and handles clean and keep it out of reach of children. Keep it dry and avoid rust on the machine.

DISCLAIMER

PLEASE READ THE FOLLOWING CAREFULLY

THE MANUFACTURER AND/OR DISTRIBUTOR HAS PROVIDED THE PARTS LIST AND ASSEMBLY DIAGRAM IN THIS MANUAL AS A REFERENCE TOOL ONLY. NEITHER THE MANUFACTURER OR DISTRIBUTOR MAKES ANY REPRESENTATION OR WARRANTY OF ANY KIND TO THE BUYER THAT HE OR SHE IS QUALIFIED TO MAKE ANY REPAIRS TO THE PRODUCT, OR THAT HE OR SHE IS QUALIFIED TO REPLACE ANY PARTS OF THE PRODUCT. IN FACT, THE MANUFACTURER AND/OR DISTRIBUTOR EXPRESSLY STATES THAT ALL REPAIRS AND PARTS REPLACEMENTS SHOULD BE UNDERTAKEN BY CERTIFIED AND LICENSED TECHNICIANS, AND NOT BY THE BUYER. THE BUYER ASSUMES ALL RISK AND LIABILITY ARISING OUT OF HIS OR HER REPAIRS TO THE ORIGINAL PRODUCT OR REPLACEMENT PARTS THERETO, OR ARISING OUT OF HIS OR HER INSTALLATION OF REPLACEMENT PARTS THERETO.

Record Product's Serial Number Here: _____

Note: If product has no serial number, record month and year of purchase instead.

Note: Some parts are listed and shown for illustration purposes only and are not available individually as replacement parts.

Questions, issues or missing parts?

Before returning to your retailer, our customer service team is here to help.



Call Us: 909.628.0880

Email Us: customer@xtremepowerusa.com

Hours of Operation: 9am - 3pm PST Monday - Friday

MADE IN CHINA